



REFRIGERATION HARDWARE SUPPLY CORPORATION


632 Foresight Circle, Grand Junction, CO 81505
Phone: (800) 716-7788 • FAX: (800) 835-6655
Email: colorado@rhsparts.com

9021 Norris Ave., Sun Valley, CA 91352
Phone: (800) 537-8300 • FAX: (800) 833-3515
Email: california@rhsparts.com


REVERSING HINGES

FACE MOUNT HINGE

Hinge Direction
Left or Right?

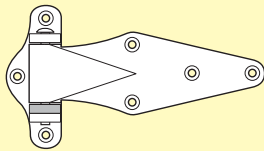

Hinge set for left-hand operation.

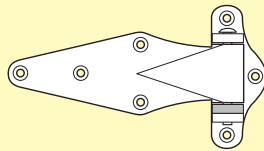


Hinge set for right-hand operation.

EDGEMOUNT HINGE

Reversing CAM-LIFT Hinge Direction
(Edgemount door hinges)



 Pry cam upward with screwdriver.




Rotate cam 180° and re-seat.

WALK-IN HINGE

Reversing Hinge Direction

- (A) Remove pin.
- (B) Rotate the hinge butt and blade. You will need to re-stack any bearings or washers. The hinge blade should turn on top of the bearings.
- (C) Replace the hinge pin to complete reversing hinge. Hinge pin should always be inserted from top side of hinge.

Note the placement of the bearings and washers in illustration. →

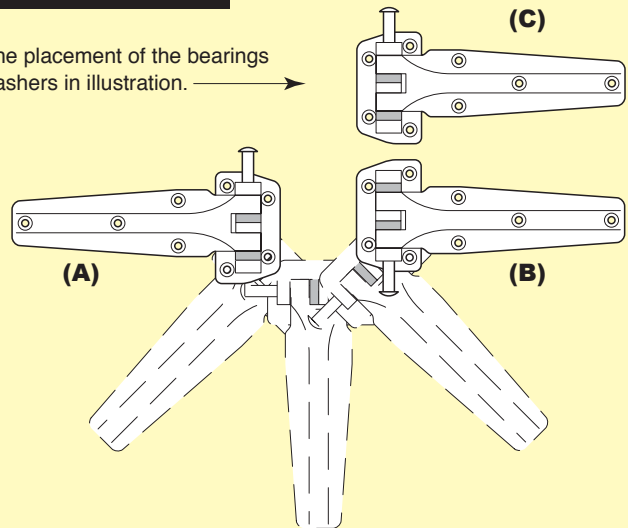

Reversing CAM-LIFT Hinge Direction
(Strap-type door hinges)

- 1) Hinge set for left-hand door
- 2) Separate door wing from hinge wing
- 3) Remove cap
- 4) Remove cam
- 5) Replace cam
- 6) Replace cap
- 7) Reset hinge for right-hand operation